

The Donaldson LifeTec™ PES-WN filter element is a sterile grade, pleated high performance polyethersulfone membrane filter. The LifeTec™ PES-WN filter element provides sterile filtration and microbial stabilization of food ingredients and beverages.

The outstanding performance of the PES-WN filter element is based on its state-of-the-art filtration media. The hydrophilic polyethersulfone membrane distinguishes itself by having an asymmetrically designed pore structure. The pore size steadily decreases towards the center of the medium resulting in a highly porous structure. This extremely durable design maintains consistent porosity and impurity retention throughout its service life without shedding or unloading contaminants.

All components meet the EU and USA requirements for Food Contact Use in accordance with CFR (Code of Federal Regulations) Title 21 and EC/1935/2004 and subsequent amendments.

The filter element is manufactured in accordance with the GMP requirements as defined in EC/2023/2006, has no migration of filter media, is non-fiber releasing and is thermally welded.

All materials used do not contain any Substances of Very High Concern (SVHC) as defined in EC/1907/2006 and EC/65/2011.

**PES-WN**

FEATURES & BENEFITS

- Sterile grade membrane filters with ratings of 0.2 µm, 0.45 µm & 0.6 µm
- Excellent flow rate
- Highly resistant materials
- Extremely low adsorption of proteins
- High thermal stability, permanently hydrophilic
- Approved for Food Contact Use according to CFR Title 21 & EC/1935/2004

INDUSTRIES AND APPLICATIONS

INDUSTRIES			CLARIFICATION & STERILIZATION		
Bottled Water	Dairy	Beer	Bottled Water	Spring Water	Alcoholic Beverages
Soft Drinks	Juice	Distilled Spirits	Mineral Water	Ingredient Water	

SPECIFICATIONS

QUALITY TEST

All products have been inspected and released by Quality Assurance as having met the following requirements:

- All 10" sterile filter modules are integrity tested to verify compliance with established quality and design specifications and to assure consistent and reliable performance.
- The traceability of each filter element according to EC/1935/2004 is provided by serial number.
- All PES-WN filter elements are completely staged, assembled, tested and packaged in Class 7 clean room facility, whose Quality Management System is approved by an accredited registering body to the appropriate ISO 9001 Quality Systems Standard.

MATERIAL COMPLIANCE USA

All components of the PES-WN filter element are FDA listed for food contact use in the Code of Federal Regulations (CFR), Title 21:

MATERIALS		CFR TITLE 21
Membrane	Polyethersulfone	177.2240
Upstream Support	Polypropylene	177.1520
Downstream Support	Polypropylene	177.1520
Outer Guard	Polypropylene	177.1520
Core	Polypropylene	177.1520
End Caps	Polypropylene	177.1520
O-Rings	EPDM	177.2600
	Silicone	177.2600
Sealing Method	Thermal Bonding	

MATERIAL COMPLIANCE EU

The PES-WN filter element meets the guideline for Food Contact Use as given in European Regulation (EC) Number 1935/2004. All polymeric components (polypropylene, polyethersulfone, EPDM) meet the requirements of EU Directive EC/10/2011 relating to plastic materials and articles intended to come into contact with foodstuffs. Migration tests have been carried out in simulants (B, D1) after flushing or in flow conditions.


All materials used do not contain any Substances of Very High Concern (SVHC) as defined in EC/1907/2006 (REACH Guideline) and EC/65/2011 (RoHS Guideline) and are free of any latex-based components. Furthermore the materials do not contain any Animal Derived Ingredient (ADI-free) and thus bear no risk of transmitting TSE and BSE.

INTEGRITY TESTING

BACTERIA RETENTION RATES (ACCORDING TO HIMA CHALLENGE PER ASTM)		
Filter Grade	Microorganism	LRV / cm ²
PES-WN 0.6 µm	Saccharomyces cerevisiae	> 7
PES-WN 0.45 µm	Saccharomyces cerevisiae	> 7
	Serratia Marcescens	> 7
PES-WN 0.2 µm	Saccharomyces cerevisiae	> 7
	Serratia Marcescens	> 7
	Brevundimonas diminuta	> 7

Filter Grade	0.2 µm, 0.45 µm , 0.6 µm (Retention Rates LRV >= 7 cm ²)	
Filtration Surface	0.77 m ² per 250 mm element (10")	
Maximum Differential Pressure	Operating Temperature	Differential Pressure
	100°F	80 psi
	150°F	60 psi
	180°F	30 psi
Cumulative Steaming Time*	249.8°F - 257°F (30 minutes) Saturated Steam (Forward Flow) up to 100 cycles	


* Figures are based on lab tests to evaluate steaming resistance. Filter elements need to be checked in actual use. Contact Donaldson for recommended Autoclaving/Steaming procedures.

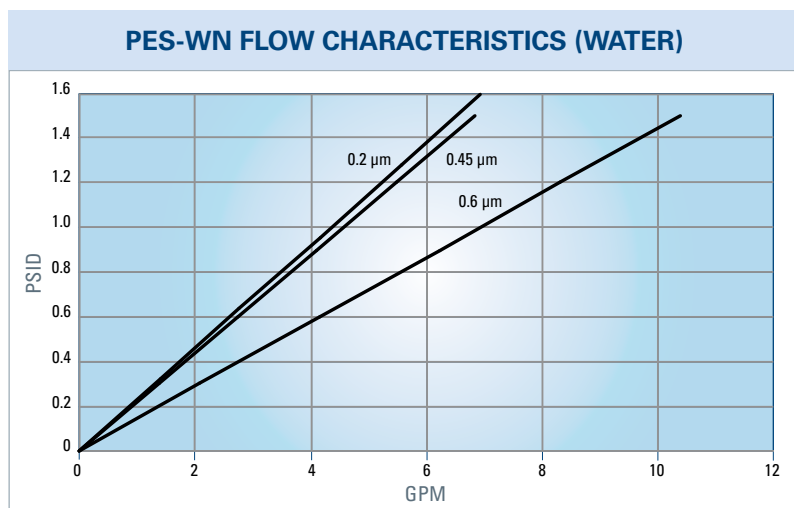

Filter Grade	Minimum Bubble Point	Maximum Diffusion Values
0.6 µm	18 psi	20 ml/min @ 10 psi
0.45 µm	32 psi	30 ml/min @ 25 psi
0.2 µm	44 psi	35 ml/min @ 35 psi


Integrity test to be done by Bubble Point or Forward Flow Test. For information on test equipment or test services, please contact your Donaldson Sales Engineer and visit our website at www.donaldsonprocessfilters.com.

DIMENSIONS

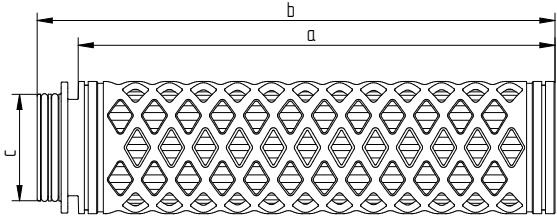


CODE 2 Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	10.0	10.8	2.2
20"	19.5	20.3	2.2
30"	29.0	29.8	2.2
40"	38.5	39.4	2.2

Code 2: 2 x 226 O-Rings, bayonet 2 locking tabs, flat end cap, integrated reinforcement ring

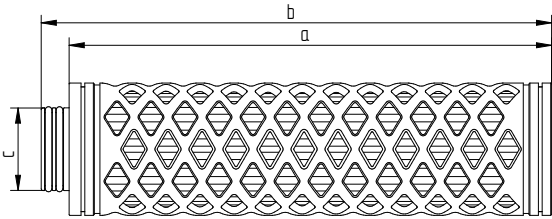


CODE 3 Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	10.1	10.7	1.7
20"	19.6	20.2	1.7
30"	29.1	29.7	1.7
40"	38.7	39.3	1.7

Code 3: 2 x 222 O-Rings, plug connection, flat end cap, integrated reinforcement ring

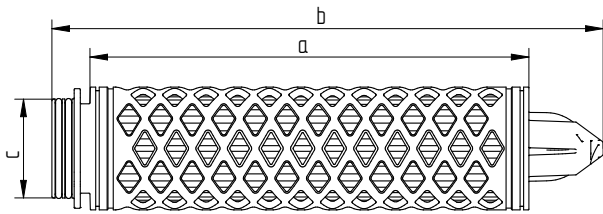


CODE 7 Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	9.9	12.4	2.2
20"	19.4	21.9	2.2
30"	28.9	31.5	2.2
40"	38.5	41.0	2.2

Code 7: 2 x 226 O-Rings, bayonet 2 locking tabs, locating fin, integrated reinforcement ring

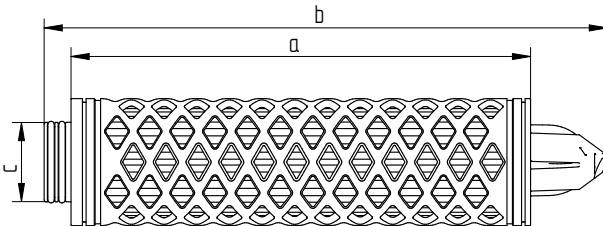


CODE 8 Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	10.0	12.2	1.7
20"	19.5	21.8	1.7
30"	29.1	31.3	1.7
40"	38.6	40.8	1.7

Code 8: 2 x 222 O-Rings, plug connection, locating fin, integrated reinforcement ring

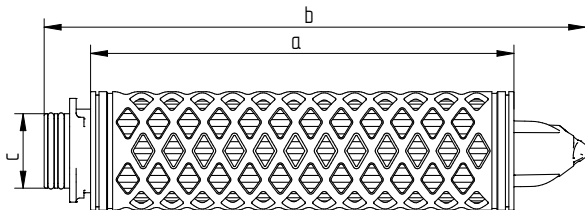


CODE 9 Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	9.8	12.6	1.7
20"	19.4	22.1	1.7
30"	28.9	31.7	1.7
40"	38.4	41.2	1.7

Code 9: 2 x 222 O-Rings, bayonet 3 locking tabs, locating fin, integrated reinforcement ring

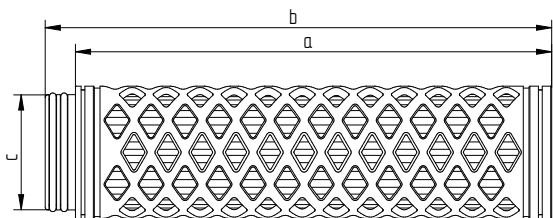

UF Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	9.9	10.6	2.4
20"	19.4	20.1	2.4
30"	29.0	29.6	2.4

Code UF: 2 x 226 O-Rings, plug connection, flat end cap, integrated reinforcement ring

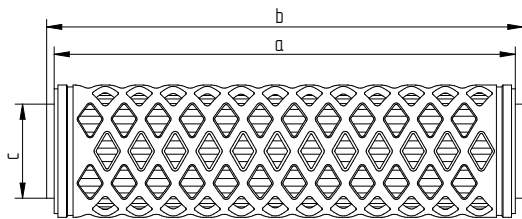

DOE Connection			
Filter Size	Dimensions (in)		
	a	b	c
10"	9.6	9.8	2.0
20"	19.7	19.9	2.0
30"	29.7	29.9	2.0
40"	39.7	39.9	2.0

DOE: Double open end with EPDM gaskets



Important Notice

Many factors beyond the control of Donaldson can affect the use and performance of Donaldson products in a particular application, including the conditions under which the product is used. Since these factors are uniquely within the user's knowledge and control, it is essential the user evaluate the products to determine whether the product is fit for the particular purpose and suitable for the user's application. All products, specifications, availability and data are subject to change without notice, and may vary by region or country.

Donaldson
FILTRATION SOLUTIONS

Donaldson Company, Inc.
Minneapolis, MN

donaldson.com
shop.donaldson.com

Australasia 61-02-4350-2066
marketing.australia@donaldson.com

Brazil 55-11-4894-6035
vendas.brasil@donaldson.com

China 86-400-921-7032
info.cn@donaldson.com

EMEA 49-2129-569-0
cap-europe@donaldson.com

India 91-124-4807-400
indiainquiries@donaldson.com

Japan 81-42-540-4123
ndl-ultrafilter-web@donaldson.com

Korea 82-2-517-3333
cap-kr@donaldson.com

Latin America 52-449-300-2442
industrialair@donaldson.com

North America 800-543-3634
processfilters@donaldson.com

South Africa 27-11-997-6000
samarketing@donaldson.com

Southeast Asia 65-6311-7373
sea.salesenquiry@donaldson.com

F117020 ENG (10/20) PES-WN Absolute Membrane Filter Elements

© 2019 Donaldson Co., Inc. All Rights Reserved. Donaldson and the color blue are marks of Donaldson Company, Inc. All other marks belong to their respective owners. {Contains Donaldson proprietary technology.}